# FlexScan EV2490

LCD MONITOR



The 23.8 - inch FlexScan EV2490 is a frameless LCD monitor equipped with USB Type-C for improving productivity and comfort at the office or at home.



The EIZO Group is aware that one of our key responsibilities is to conduct business taking the environment into consideration. We strive to contribute to the sustainable development of our society by being conscious of the impact our business has on the environment.

In product development, we endeavor to meet the legal requirement and standards as well as to enhance the environmentally sound quality of our products including compliance with the legal requirement and standards, industry trends and social conditions.

In addition, we conduct product environmental assessments in accordance with our own Environmental Compliance Standards to measure the environmental soundness of products.





FlexScan EV2490 LCD Monitor

According to ISO 14025

This declaration is an environmental product declaration (EPD) in accordance with ISO 14025. EPDs rely on Life Cycle Assessment (LCA) to provide information on a number of environmental impacts of products over their life cycle. <u>Exclusions</u>: EPDs do not indicate that any environmental or social performance benchmarks are met, and there may be impacts that they do not encompass. LCAs do not typically address



the site-specific environmental impacts of raw material extraction, nor are they meant to assess human health toxicity. EPDs can complement but cannot replace tools and certifications that are designed to address these impacts and/or set performance thresholds – e.g. Type 1 certifications, health assessments and declarations, environmental impact assessments, etc. Accuracy of Results: EPDs regularly rely on estimations of impacts, and the level of accuracy in estimation of effect differs for any particular product line and reported impact. Comparability: EPDs are not comparative assertions and are either not comparable or have limited comparability when they cover different life cycle stages, are based on different product category rules or are missing relevant environmental impacts. EPDs from different programs may not be comparable.

PROGRAM OPERATOR	UL Environment			
DECLARATION HOLDER	EIZO Corporation			
DECLARATION NUMBER	4790277420.101.1			
DECLARED PRODUCT	FlexScan EV2490 LCD Monitor			
REFERENCE PCR		Products(2017-3) / EDP 004.MONITOR claration of Products_Product Category f Environment, Korea		
DATE OF ISSUE	March 17, 2022			
PERIOD OF VALIDITY	5 Years			
	Product definition and information ab	out building physics		
	Information about basic material and the material's origin			
	Description of the product's manufacture			
CONTENTS OF THE DECLARATION	Indication of product processing			
BESEARCHON	Information about the in-use conditions			
	Life cycle assessment results			
	Testing results and verifications			
The PCR review was conducte	ed by:	ÚÔÜÁÜ^çã}¸ÁÚæ}^		
This declaration was independently verified in accordance with ISO 14025 by Underwriters Laboratories		Cooper McC		
☐ INTERNAL 🗵 EXTERNAL		Cooper McCollumÊAVŠÁÒ} çã[ } { ^} c		
This life cycle assessment was independently verified in accordance with ISO 14044 and the reference PCR by:		Jane A. Nellert		
		James MellentineÊThrive ESG		



FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

### **Product information**

### **Product description**

The 23.8 - inch FlexScan EV2490 is a frameless LCD monitor equipped with USB Type-C for improving productivity and comfort at the office or at home.



### **Application**

This product is suited to general purposes like creating documents, viewing multimedia content.

#### **Product Environmental Information**

 $EV2490 \ was \ certified \ EPA \ ENERGY \ STAR \ Ver. 8.0, \ TCO \ Certified \ Generation \ 9, \ EPEAT (IEEE 1680.1-2018) \ , \\ TUV/Ergonomie, \ TUV/Low \ blue \ light \ content, \ TUV/Flicker \ Free, \ RoHS, \ WEEE \ and \ China \ RoHS.$ 

### **Company Environmental Activities**

Although global environmental standards such as TCO Certified and EPEAT are not legal regulations, EIZO has actively participated and adapted from the beginning of the standard to improve the environmental performance of our products.





FlexScan EV2490 LCD Monitor

According to ISO 14025

#### **Technical Data**

The below table shows the decpription of product technical specification.

Table 1: Technical specification

	T	T 1
	Туре	IPS
	Backlight	LED
	Size	23.8" / 60.5 cm
	Native Resolution	1920 x 1080 (16:9 aspect ratio)
Panel	Viewable Image Size (H x V)	527 x 296.5 mm
Fallel	Pixel Pitch	0.275 x 0.275 mm
	Display Colors	16.77 million
	Viewing Angles (H / V, typical)	178° / 178°
	Brightness (typical)	250 cd/m2
	Response Time (typical)	5 ms (gray-to-gray)
	Input Terminals	USB Type-C (DisplayPort Alt Mode, HDCP 1.3), DisplayPort (HDCP 1.3), HDMI (HDCP 1.4)
Video Signals		USB Type-C: 31 - 68 kHz / 59 - 61 Hz
	Digital Scanning Frequency (H / V)	DisplayPort: 31 - 68 kHz / 59 - 61 Hz
		HDMI: 31 - 68 kHz / 49 - 51 Hz, 59 - 61 Hz
USB Upstream Downstream		USB 3.1 Gen 1: Type-B, Type-C
		USB 3.1 Gen 1: Type-A, Type-C
	Speakers	1.0 W + 1.0 W
Audio	Input Terminals	USB Type-C, DisplayPort, HDMI
	Output Terminals	Headphones (Stereo mini jack)
	Power Requirements	AC 100 - 240 V, 50 / 60 Hz
Power	Typical Power Consumption	11 W
Fower	Maximum Power Consumption	155 W
	Power Save Mode	0.5 W or less
Physical	Dimensions (Landscape, W x H x D)	537.8 x 344.7 - 539.7 x 230 mm





FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

Specifications	Net Weight	7.2 kg
Environmental	Operating Temperature	5 - 35 °C
Requirements	Operating Humidity (R.H., non-condensing)	20 - 80 %

#### **Material Content**

The below tables show the weight composition by compnent or material in a product and package. Less than 5% of cumulative mass of the product/packagge are excluded.

Table 2: Components/Materials in a Product

Component/Material	Weight (%)	Notes
ASSY-STAND-UNIT	28.60%	Inclusion
UNIT-LCD	25.50%	Inclusion
ASSY-PCB-POWER	11.20%	Inclusion
ASSY-PCB-MAIN	8.60%	Inclusion
MLD-REAR-COVER	6.90%	Inclusion
ASSY-BASE-UNIT	6.00%	Inclusion
MLD-MID-COVER	3.20%	Inclusion
CORD-AC	2.90%	Inclusion
MTL-VESA-PLATE	1.40%	Inclusion
CABLE	1.40%	Inclusion
Plastic Moldings	1.10%	Exclusion
MTL-MT-COVER	1.00%	Exclusion
Printings	1.00%	Exclusion
Metal Materials	0.60%	Exclusion





According to ISO 14025

Component/Material	Weight (%)	Notes
Harnesses	0.30%	Exclusion
Other	0.30%	Exclusion

Table 3: Components/Materials in a Package

Component/Material	Weight (%)	Notes
CARTON-24W-27	46.20%	Inclusion
CUSHION-24W-22-B	19.30%	Inclusion
CUSHION-24W-22-T	7.60%	Inclusion
LCD-SIDE-PAD-L	6.40%	Inclusion
LCD-SIDE-PAD-R	6.00%	Inclusion
TOP-PAD	4.90%	Inclusion
MID-PAD	4.60%	Inclusion
BOTTOM-PAD	3.00%	Exclusion
SHEET	1.30%	Exclusion
BAG	0.60%	Exclusion





FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

### **Manufacturing Location**

Table 4: Manufacturing Location

Factory	Address
EIZO Corporation	153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan
EIZO MS Corporation (Unit board)	37-9-Re Jike, Hakui, Ishikawa 925-8566 Japan

### **Transportation**

The below table show the transportation path from EIZO manufacturing locatin to their customer sites.

Table 5: Trasportation information from a factory to a customer site

Path	Geographical info	Volume	Distance	
raui	Departure	eparture Arrival		(km)
10t truck	Hakusan, Ishikawa	Tokyo	10.5	600
4t truck	Hakusan, Ishikawa	Tokyo	17.3	600
10t truck	Hakusan, Ishikawa	Osaka	2.8	450
4t truck	Hakusan, Ishikawa	Osaka	4.9	450
10t truck	Hakusan, Ishikawa Nagoya		1.9	400
4t truck	Hakusan, Ishikawa	Nagoya	1.7	400
10t truck	Hakusan, Ishikawa Fukuoka		5.1	900
4t truck	Hakusan, Ishikawa	Fukuoka	0.2	900





FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

### **Use Phase**

In Use phase, the total power consumption during the lifetime was calculated according to EPD 004: Monitor [2013/00/201309], Product Category Rules (PCR) for Monitor as below.

Table 6: Usage Condition

Usage time (hours/day)			Lifetime	Usage day
On mode	Standby mode	Off mode	(year)	(days/year)
9.6 (40%)	1.2 (5%)	13.2 (55%)	4	365

Power consumption (W)			Total Power Consumption	
On mode	Standby mode	Off mode	(kWh)	
11 W	0.5 W	0.5 W	164.7 kWh	

### **Disposal Stage**

The below table show the waste treatment by material according to the data from Japan Plastic Waste Management Instituten, Association for Electric Home Appliances, Paper Recycling Promotion Center.

Table 7: Disposal treatment

Material	Weight (%)	Recycle	Incineration	Landfill
Plastic	22.4%	86%	8%	6%
Iron	37.8%	86%	-	14%
Paper	28.9%	95%	5%	-
Glass	3.7%	-	-	100%
Aluminum	4.7%	86%	-	14%





FlexScan EV2490 LCD Monitor

According to ISO 14025

Copper	1.3%	86%	-	14%
Other material	1.1%	-	-	100%
Other metal	0.1%	-	-	100%

### **LCA Rules**

#### **Functional Unit**

The functional unit is defined as one unit of 23.8-inch LCD monitor.

### **System Boundary**

The system boundary includes all life cycle stages includes Collecting Raw Materials, Manufacturing, Distribution, Use and Disposal. This is a cradle-to-grave study and this LCA study is not comparative assertion.

Table 8: System Boundary


Stage Prior to Manufacturing	Collecting Raw Materials	A1	Х
Stage of Manufacturing	Manufacturing	A2	X
	Distribution	A3	Х
Stage of Use	Use	В	Х
Stage of Scrapping	Disposal	С	Х





FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

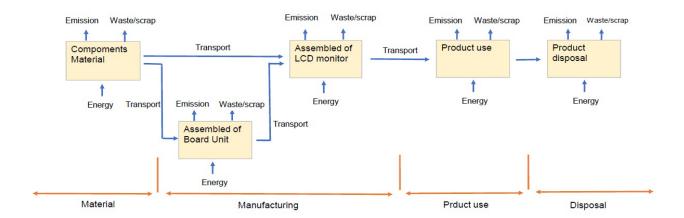

#### **Cut-off Rules**

Material Inventory survey was conducted on 95 wt. % of material in each Product / Package.Disposal stage survey was conducted on 95 wt. % of material in each Product / Package.

#### **LCA Data**

For Life Cycle Assessment, SimaPro release 9 software system has been used. Ecoinvent 3 datasets have been taken from SimaPro release 9 software database.

### EIZO collects

- Material data from the product specification
- Usage codition data from the product specification
- Transportation data from carrier's input
- Energy data from the utility invoice





FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

#### **Data Quality**

All foreground data were collected at Hakusan and Hakui Plant Between April 2019 and March 2020 (One year average data).

Background data were used from ECOINVENT 3 database (The data version is 2020).

#### **Allocation**

The electric power used in the factory for manufacturing an EV2490 was calculated by allocating EV2490 weight from the total weight of the monitor produced in one year (monitor mass x number of production) of this factory.

The electric power used in the PCB board factory for manufacturing an EV2490 PCB board was allocated from the production ratio of small, medium, and large monitors for one year and its representative mass of the PCB board.

### **Assumption and Limitation**

### **Assumption**

The on-mode power consumption when using this monitor was used the power consumption value of EIZO's Typical Power Consumption specifications.

For transportation, EIZO picked up four major cities, Tokyo, Osaka, Nagoya and Fukuoka.

Glass and other materials/metals were assumed to be 100% landfilled.

### **Limitation**

The study results are limited to a specific use scenario and real-world use of the monitor which may significantly change the result. Materials are represented by industry average data, not primary supplier data. To the extent that material/components suppliers may not be average, the results might significantly change.





FlexScan EV2490 LCD Monitor

**According to ISO 14025** 

# **Life Cycle Assessment Results**

The LCA was calculated by using CML and developed by the Institute of Environmental Sciences Leiden University, the Netherlands. https://www.universiteitleiden.nl/en/science/environmental-sciences/tools-and-data#CML\_IA

LCIA results are relative expressions and do not predict impacts on category endpoints, the exceeding of thresholds, safety margins or risks.

Table 9: Life Cycle Assessment Results

Environment Impact							
Impact Category	Units	A1-C	Model				
Global warming (GWP)	kg-CO2eq	3.41E+02	IPCC				
Ozone depletion (ODP)	kg-CFC-11eq	1.64E-05	WMO				
Eutrophication (EP)	kgPO <sub>4</sub> ³-eq	1.44E+00	Heijungs et al.				
Acidification potential (AP)	kg-SO₂eq	3.14E+00	Hauschild and Wenzel				
Photo Chemical Ozone Creation (POCP)	kg-C₂H₄eq	1.39E-01	Jenkin and Hayman				
Abiotic Depletion Potential (ADP)	Kg-Sbeq	2.58E+00	Guinee et al.				

Impact Category	Units	Raw Material A-1	Manufacturing A-2	Transportation A-3	Use B	Disposal C
GWP	kg-CO₂eq	2.25E+02	2.81E+00	1.36E+00	1.11E+02	1.46E+00
ODP	kg-CFC-11eq	1.36E-05	6.14E-08	2.03E-07	2.53E-06	3.38E-08
EP	kgPO <sub>4</sub> ³-eq	1.33E+00	2.56E-03	8.19E-04	1.09E-01	3.15E-04
AP	kg-SO₂eq	2.60E+00	1.29E-02	3.56E-03	5.26E-01	7.44E-04
POCP	kg-C₂H₄eq	1.17E-01	5.29E-04	1.79E-04	2.15E-02	3.43E-05
ADP	Kg-Sbeq	1.74E+00	2.04E-02	9.75E-03	8.02E-01	1.64E-03





FlexScan EV2490 LCD Monitor

According to ISO 14025

### Interpretation

#### **Completeness**

Since we have made a 5% cut-off, the raw material should be an additional 5%. In the GWP impact index, Row material accounts for 66.0% of total emissions. Therefore, the total impact will increase by 3.3%.

The materials within 5% are small parts, sheets and labels made of general plastics, and copper harnesses, paper prints, metal, screws, etc.

The 5% materials do not include anything that has a major impact on the environment.

### Sensitivity

When the brightness of On-mode, which may vary as data, is doubled, it will increase by 4W in actual measurement.

When On-mode increases by 4 W, Total Power Consumption increases from 165 kWh to 221 kWh. This corresponds to an increase of 41.4 kg in CO2 emissions. In the GWP impact, Total Power Consumption (use phase) accounts for 37.7 % of the total, so the total GWP impact increases by 11.7 %.

#### Consistency

The impact index of the LCD panel accounts for 58.0 % of the raw material, and 38.2 % of the total life cycle impact index. If the impact index of the LCD panel increases by 10% due to errors, the total impact will increase by 3.82 %. This corresponds to an increase of 13.0 kg in CO2 emissions.

#### Representativeness

The materials and processes of this product are very common. So, most of selected data represents this model well. However, there are several kinds of cables/connectors in this product and we used only the below three data. These cables/connectors consist of 4.2% total product weight. This might have some small variances.

- Cable, three-conductor cable
- Electric connector, wire clamp
- Electric connector, peripheral type buss

There is a stand-free version as another form of EV2490. In the case of the version without stand, the impact index for the no stand is reduced.

From the GWP impact, CO2 emissions from the stand are 5.4 % of the raw material, which is 12.1 kg. The total impact without a stand is only decrease of 3.53 %, and it can be considered that the standard product with stand can be regarded as representative data.





FlexScan EV2490 LCD Monitor

According to ISO 14025

### References

ISO 14025/DIN EN /ISO 14025:201110: Environmental labels and declarations - Type III environmental declarations - Principles and procedures

ISO 14040: 2006 - Environmental management - Life cycle assessment - Principles and framework

ISO 14044:2006 - Environmental management - Life cycle assessment - Requirements and guidelines

EPD 004: Monitor [2013/00/201309], Product Category Rules (PCR) for Monitor

SimaPro 9.0 / Ecoinvent 3:

CML 2001 (all impact categories) V2.05 / the Netherlands, 1997

